


Praher mesh identification on stainless screens for INLINE strainers

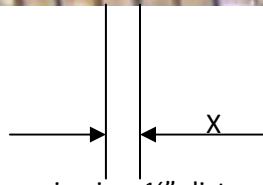

1000 micron equals 5 opening in a $\frac{1}{4}$ " distance

750 micron equals 6 openings in a $\frac{1}{4}$ " distance

500 microns equals 7 openings in a $\frac{1}{4}$ " distance

Use a vernier caliper or a ruler and lay it over the screen—count the openings by pushing a pen over the screen—every opening will be felt when the pen point drops into the opening.

